


Color Vandal-Proof Dome Camera



CV-10NE24N

FEATURES

- 1/3" Sony CCD
- 540 TVL
- 4 ~ 9mm Varifocal Lens
- 3 Axis Bracket
- SNR (Super Noise Reduction)
- Adjust DIP Switch on the Board
- 12VDC / 24VAC

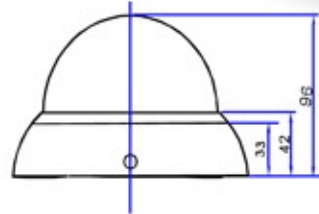

External dimensions unit : mm

ADJUST LENS

1. Unlock the screw on the bottom of base
2. Take off the dome case.
3. Adjust suitable iris level and focus the lens.
4. Install the dome case and lock the screw.

SPECIFICATIONS

Model	CV-10NE24N
Image Sensor	1/3" Sony CCD
Sync. System	Internal
Horizontal Resolution	540 TV Lines
S/N Ratio	> 50dB
Minimum Illumination	0.01 Lux @F1.2
Auto Electronic Shutter	1/50s~1/12,000s
Gama Characteristic	0.45
AES	ON / OFF (DIP Switch 1)
BLC	ON / OFF (DIP Switch 2)
Mirror	ON / OFF (DIP Switch 3)
AGC	ON / OFF (DIP Switch 4)
Video Output	1Vpp, 75 Ω
Auto Gain Control	Auto
Power/Current	12VDC (<100mA) / 24VAC (80mA)
Lens	4~ 9 mm Varifocal Lens
Dimension (mm)	140(W) x 96(D)
Weight (g)	830g
Storage Temperature	-20 ~ + 65 °C RH85% Max
Operating Temperature	-10 ~ + 50 °C RH85% Max

OPTIONAL MOUNTS



Wall Mount



Ceiling / Pendant Mount

CAUTIONS

1. Power Supply

- (1) Use only with a 12V DC / 24V AC power supply
- (2) Be sure to connect each lead to the appropriate terminal. Wrong connection may cause malfunction and / or damage to the video camera.

2. Operating and Storage Locations

- (1) Do not attempt to aim the camera at the sun or other extremely bright objects that cause smear to appear, irrespective of whether the camera is operating or not. This can damage the CCD (Charge Coupled Device).

(2) Do not place the camera in the following locations.

- ① Locations subjected to extremely high or low temperatures.
 - ② Locations subjected to high levels of humidity and dust.
 - ③ Locations where there are large amounts of water vapor and steam.
 - ④ Locations subjected to excessive vibrations.
- (3) When this camera is installed near the equipment like wireless communication device which emits strong electromagnetic field, some irregularity such as noise on monitor screen may happen.
- (4) When plugging the power cord to and electric outlet, be sure to leave enough space around the outlet for easy access to the outlet for later turning the power on and off.